

CONCRETERS STARTER PACK

Install Guide Using: **Waffle Pod Slab Design**




PRODUCT INTRODUCTION

LOKPOD[®] is a 100% recycled plastic pod void filling system, built for strength, easy stacking and a cleaner site.

LOKPOD[®] sizes:


- 300mm
- 225mm
- 150mm

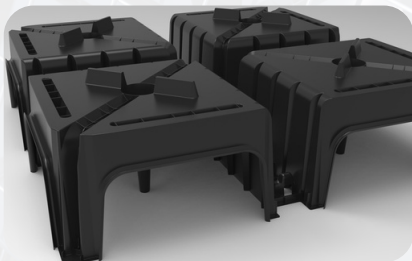


Extenders come in two sizes:

- Standard (for 225mm and 300mm LOKPOD[®]s)
- 150mm (for 150mm LOKPOD[®]s only)


For **reference** while using this guide:

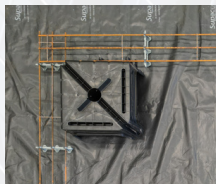

LOKPOD[®]
Quarter Pod

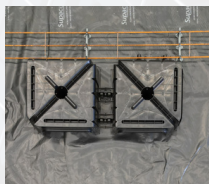

LOKPOD[®]
Half Pod

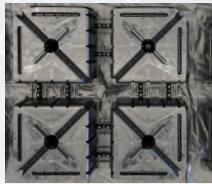

LOKPOD[®]
Full Pod

INSTALLATION

The **smarter** slab solution



TOOLS REQUIRED



Reciprocating or
Circular
Saw



Safety
Glasses



Safety
Boots




Safety
Gloves



Hard Hat
& Vest

INSTALLATION

STEP 1

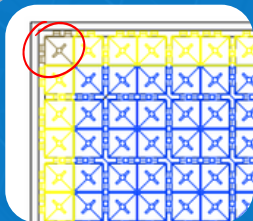

To follow a waffle pod slab layout, see the CAD plans. Start from the corner circled in red as shown in drawing.


STEP 2



Cut out one quarter from a full LOKPOD®.

INSTALLATION

The **smarter** slab solution

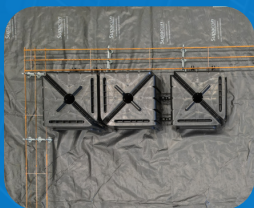

STEP 3

Cut out a half pod and connect it to the quarter pod.




STEP 4

Repeat step three, adding another half pod on the other side, so that your pod reflects the image on the left.


INSTALLATION

The **smarter** slab solution

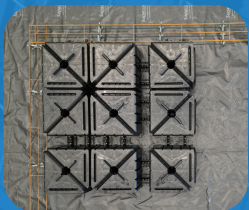

STEP 5

Take a full pod and attach it to what you have built so far.

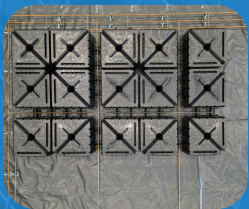

STEP 6

Repeat step two and continue this process to complete your slab and 'flood out'

INSTALLATION

The **smarter** slab solution



TIPS FOR SUCCESS

- ✓ Make sure to follow the layout on the CAD/engineering plans.
- ✓ To maintain a straight rib, fill in with full pods regularly.
- ✓ Share your success with us so we can promote your business as a LOKPOD® user.



**Integrated
System**



**1-to-1
Substitution**



**Built for
Durability**



**Easy
Handling**



**Training
Provided**



**Stays
Grounded**

Get in touch now for your Smarter **Slab Solution**
131 557 | lokpod.com.au

Proudly Supplied by

ARC
The Australian Reinforcing Company